



## Application Note COP Ignition Coil


<b>Firmware/Software Version:</b>	Any
<b>Vehicle:</b>	Universal
<b>Additional Notes:</b>	This coil may require an external pull-up; Resistors to be added by the user, in order to drive the coil.

### Coil Configuration Details

<b>Trigger Mode:</b>	Depends on triggering hardware
<b>Coil Charge Time:</b>	see chart below
<b>Special Features:</b>	May require external 1k pull-up resistors on trigger input

Voltage	Charge Time (ms)
8	5
10	4
12	3
14	2,5
16	2

### Wiring and pin input

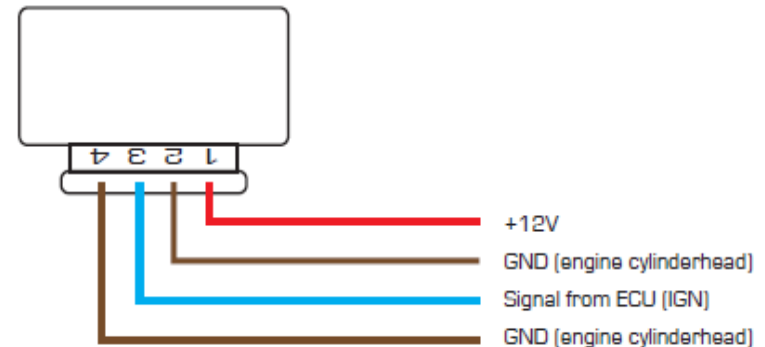

----- **Disclaimer:** The information in this document is believed to be correct. It is up to the end user to verify the correct setup for his/her application. -----