





## Application Note VR Sensor

<b>Firmware/Software Version:</b>	Any
<b>Vehicle:</b>	Universal
<b>External wiring:</b>	1: Ac Signal 2: Ac Signal 3: Shielding

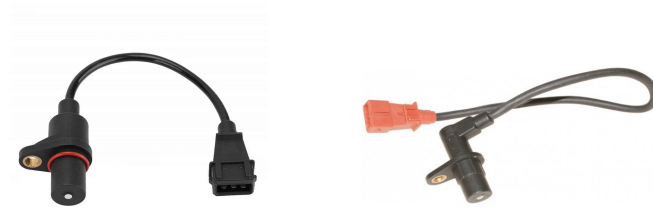

### Wiring and pin input

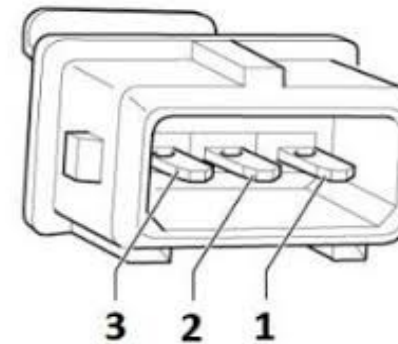

### Pressure Sensor Details

<b>Output/test:</b>	AC induction voltage 0-100V
	Measure coil inductance between 1-2
	3 should test "open" to 1-2 if not replace sensor
<b>Additional Notes:</b>	Always use 3pin trigger sensor with shielding, avoiding electrical interferences

----- **Disclaimer:** The information in this document is believed to be correct. It is up to the end user to verify the correct setup for his/her application. -----