



Application Note DIS Ignition Coil

| | |
|-----------------------------------|---|
| Firmware/Software Version: | Any |
| Vehicle: | Universal |
| Additional Notes: | This coil may require an external pull-up Resistors to be added by the user to the wire harness in order to drive the coil. |




Pin-out

- 1 = Spark input signal 1
 - 2 = 12V supply
 - 3 = Spark input signal 2
 - 4 = Power Ground
- Set the Spark Output to Going High.

Coil Configuration Details

| | |
|--------------------------|---|
| Trigger Mode: | Depends on triggering hardware |
| Coil Charge Time: | see chart below |
| Special Features: | May require an external 1000 ohm pull-up resistors. |

| Voltage | Charge Time (ms) |
|---------|------------------|
| 8 | 5 |
| 10 | 4 |
| 12 | 3 |
| 14 | 2,9 |
| 16 | 2,5 |

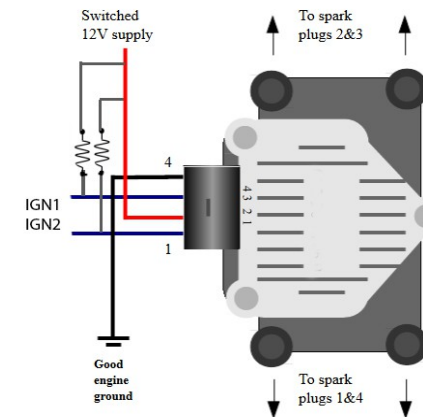

----- **Disclaimer:** The information in this document is believed to be correct. It is up to the end user to verify the correct setup for his/her application. -----